


## **Key Turbo Features**

- · Gamma-Ti turbine wheel
- Dual ceramic ball bearing assembly with metal cage
- Standard T4 mounting flange

# Not Included with Turbo Assemblies:

- Speed sensor
- Turbine outlet V-Band
- Turbine inlet gasket
- · Oil drain gasket or drain port fitting


#### COMPRESSOR MAP

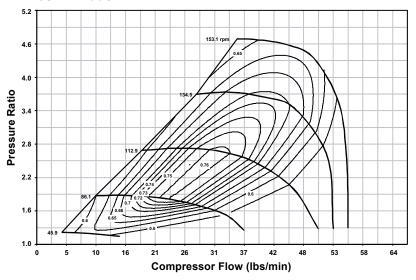



#### TURBINE HOUSING OPTIONS

Turbine Housing Part Number	A/R	Inlet Flange Shape	Housing Config.	
12641008006	0.83	Т3	Single Scroll WG	
12641008007	0.92	T4	Twin Scroll WG	
12641019016	1.05	T4	Twin Scroll Non WG	

### TURBO FRAME DIMENSIONS

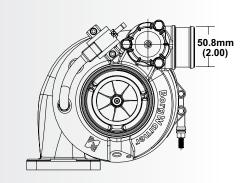

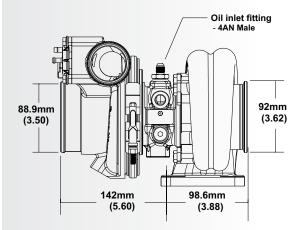

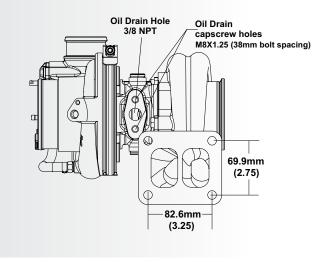

#### SUPER CORE CONFIGURATION

The following parts are not included as part of the super-core assembly: turbine housing, assembly clamp plate hardware, wastegate parts.

Turbo Part #	Turbo Frame Size	Super Core Part#	Comp. Wheel Outer Dia. (mm)	Comp. Wheel Inducer Dia.	Turbine Wheel Outer Dia.	Turbo A/R	Inlet Flange Config.
179391	B2	179354	70	52	64	1.05	T4

